

# INSTALLATION INSTRUCTIONS


Mfg. PN BC-STNLS

1. Remove the core from the muffler.



2. Determine the packable length of the muffler. This is normally the distance between the front and rear endcaps.

3. Trim the wire mesh, wire wool and glass mat to the packable length of the muffler. All three materials can be cut with scissors.

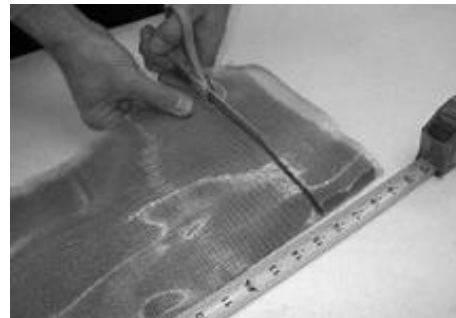

4. Once trimmed, arrange the materials on a work surface for rolling. Layer all three materials so they can be rolled at the same time. Place the wire wool between the wire mesh and glass mat. The packing will roll more uniformly if the end cap on the core hangs off the side of the work surface.



5. Once you've finished rolling the glass mat around the core, use masking tape to hold it in place during installation. The masking tape can stay in the muffler.



6. Re-install the core assembly into the muffler. Seal the end-caps with high-temp RTV silicone to prevent moisture from entering the muffler.

This kit contains 1/4" thick glass mat 60" x 20", wire wool 7" x 20", wire mesh 8" x 20" and 12 3/16" rivets.